





FILTER CHANGE INSTRUCTIONS

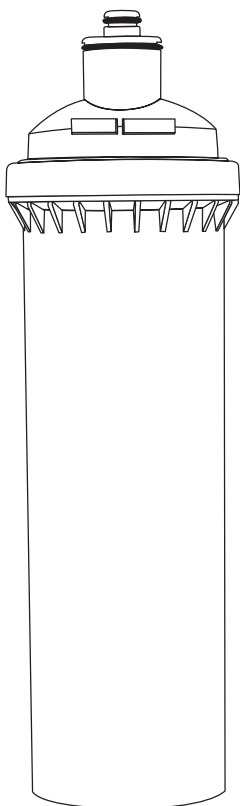

INLINE SYSTEM

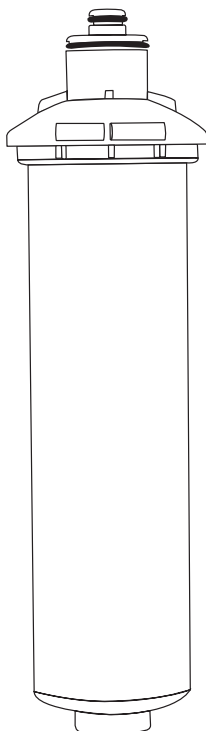


SATELLITE SYSTEM

PR-P-OLIFCI

FILTER CHANGE INSTRUCTIONS


Cartridge Removal

- 1 Turn off cold water supply at the undersink isolation valve. It is also advisable to turn off the mains water supply.

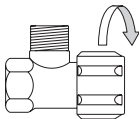


- 2 Turn ON tap to release pressure from Filter System.

3

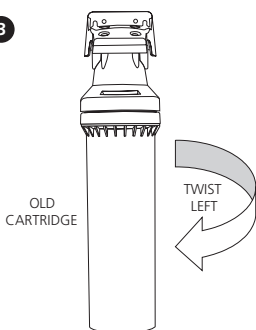


4

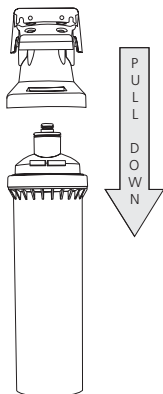


- 5 Dispose of used filter cartridge thoughtfully.

Cartridge Replacement

1

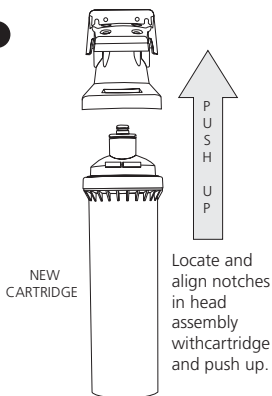


2

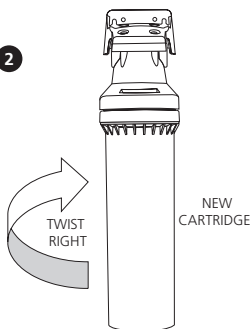

- 3 Turn ON water supply at mains and isolation valve.

- 4 Turn filter tap ON and let water run for **2-3 minutes** to purge air from Filter System.

- 5 Turn tap OFF and check for leaks.

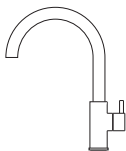

- 6 **Filter cartridges must be replaced at least every 12 months** and incoming water pressure must not exceed 500 kPa.

- 7 Use pink sticker provided to record the **filter replacement date** and stick on the cartridge as a reminder. Additionally, use QR code below to register for email reminders.

NOTE – Flushing the filter cartridge is important to remove air from the system and any loose carbon powder. At first the water may appear cloudy due to compressed trapped air in the filter and hoses. However the cloudiness will disappear over time and with use.

Register for
filter change
reminders

