

ADDITIONAL STEPS, ADVICE AND CONSIDERATIONS FOR INSTALLING THE OLIVERI BUTLER UNDERMOUNT SINK PR1263U / PR1290U

This document should be used in conjunction with Oliveri's undermount sink installation instructions

SINK CABINET REQUIREMENTS.

The Butler Sink requires a special sink cabinet with the front cut out to accommodate the APRON front of the sink. We recommend that an experienced cabinetmaker is responsible for all cabinet work. Ensure the cabinet will not foul the sink front apron or mounting flange.

TEMPLATE

Cut out templates for your Oliveri sink are available online at oliverisinks.com. The cutout is designed to reveal 55mm of the sink in front of the bench top front edge. This positive reveal distance can be adjusted upon agreement between the customer, cabinetmaker and bench top supplier.

CABINET FITMENT


We highly recommend that the actual sink to be installed is available for the cabinet maker during manufacture of cabinet and support frame.

SINK DIMENSIONS

Butler Sinks are individually hand made by bending and welding processes. Product dimensions will vary from one sink to the next. Accepted industry standards for accuracy of hand made products of this type is within 3mm.

WOOD BRACING

Carefully position wooden braces into the cabinet to support the flange and front apron.

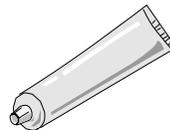


FITTING THE SINK


Follow the Oliveri standard undermount installation instructions. Use method "A" (Sandwich Method) to mount the sink flush with the top of the cabinet then seal the mating surface with silicone and install the counter/bench top.



(Install wood bracing)

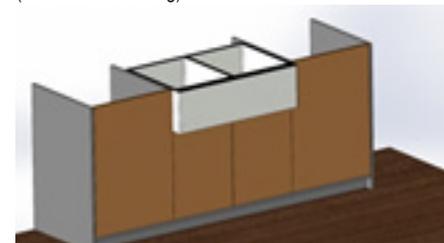

(Install butler sink)

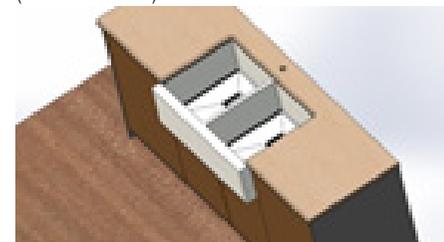

(Install counter top)